PO Box 7987
Edmond, OK 73083
14710-B Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

IMPORTANT:
The ideal location for the Adjustable End Cap is on the UNDER portion of the Border Timber that receives the spike. This will assist in the longevity of the product.

Spike to Spike Gap to Fill in Inches	Border Timber Cut in Inches	Sleeve Use or Cut
0 to 12	0	Use to Extend up to 12"
14	40	10
16	38	8
18	36	6
20	34	4
22	32	2
24	30	0
26	28	0
28	26	0
30	24	0
32	22	0
34	20	0
36	18	0
38	16	0
40	14	0
42	12	0
44	10	0
46	8	0
48	0	0
50	4	Use to Extend up to 12"
52	2	Use to Extend up to 12"
54 to 60	0	Use to Extend up to 12"

12" or 8" Border Timber Cut Location

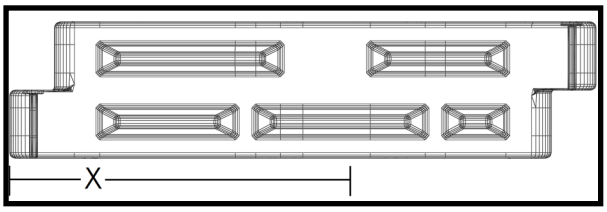

Measure from the end of the border, NOT the spike location to achieve measurements provided in the chart.

Adjustable End Cap Cut Location

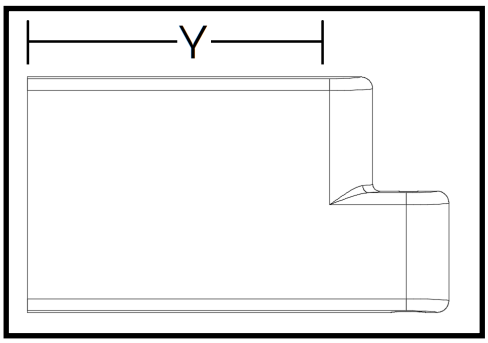

Measure from the OPEN end of the adjustable end cap, NOT the spike location to achieve measurements provided in the

US PATENT NO.12,016,280 B2

Watch Install Videos

Adjustable End Cap Instructions