PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

Watch Install Videos

BORDER BENCH

INSTALLATION INSTRUCTIONS AND MATERIALS LIST

8" BORDER ORIENTATION

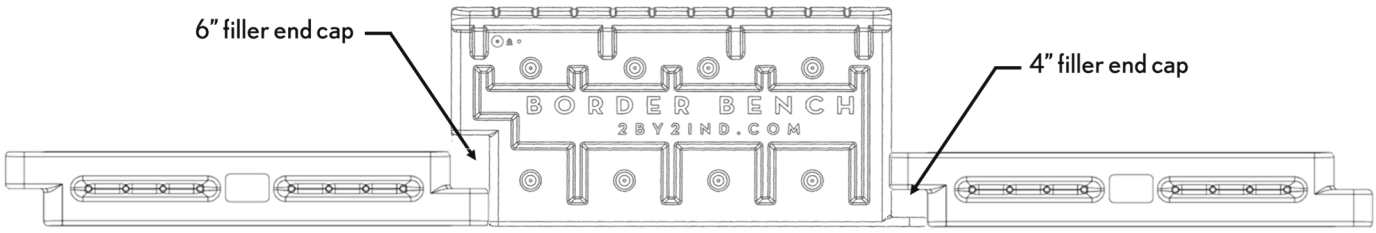

12" BORDER ORIENTATION

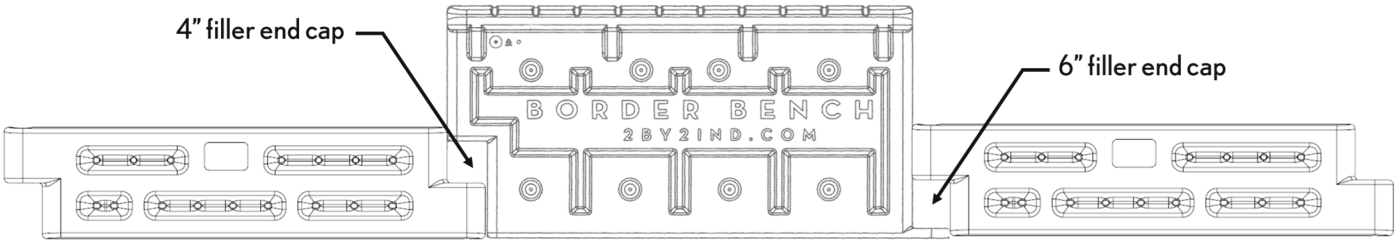

PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

(1) 6" FILLER END CAP

(1) 4" FILLER END CAP

(3) 42" STEEL SPIKES

(1) BORDER BENCH

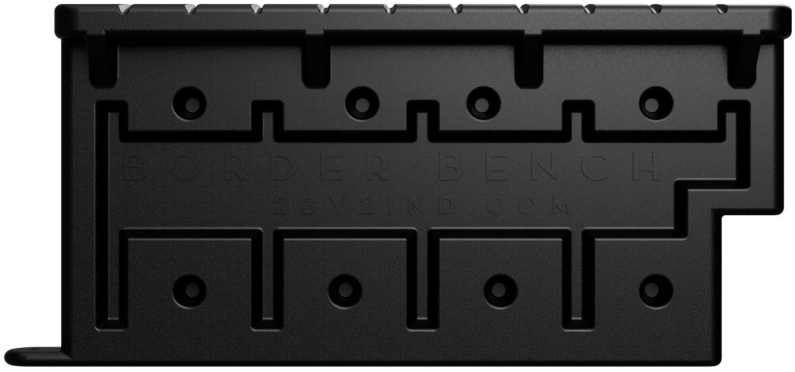

Here are five easy steps to complete the installation of your new Border Bench from 2by2 Industries:

Please see diagrams for each size border timbers on the other side of this installation sheet.

1. The Border Bench is designed to be universally compatible with any 8" or 12" "Over/Under-Style" playground border timber. Two (2) Filler End Caps are provided to fill the gaps created when connecting the Border Bench to border timbers. The Border Bench is also designed to be the same size as a standard 4-foot border timber (spike to spike).
2. The Border Bench, when installed in its proper orientation, will never sit directly on top of the adjacent border timbers. The "Over-Portion" of the Border Bench will be sitting directly above the "Under-Portion" of the border timber. This will create a gap, which will be filled with our Filler End Cap.
3. Because the Border Bench is universal to both the 8" and 12" border timbers, you will use one 4" Filler End Cap and one 6" Filler End Cap with every application of the Border Bench. As long as you follow the orientation guidelines in Step 2, you will have two gaps that will be filled with our Filler End Caps.
4. Once you have the Border Bench, Filler End Caps, and the adjacent border timbers lined up, insert the three 42" Steel Spikes into the top of the Border Bench's pre-drilled countersunk holes. You will have one standard size spike left over from your existing border timbers. This will be placed on the existing border timber's "Over-Portion" and run through the ground-level "wing" of the Border Bench.
5. Now that you have everything lined up, in place, and where they need to be, hammer the spikes into the ground!