PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

15' GAGA BALL PIT FLOOR

INSTALLATION INSTRUCTIONS

PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

WATCH INSTALL VIDEO!

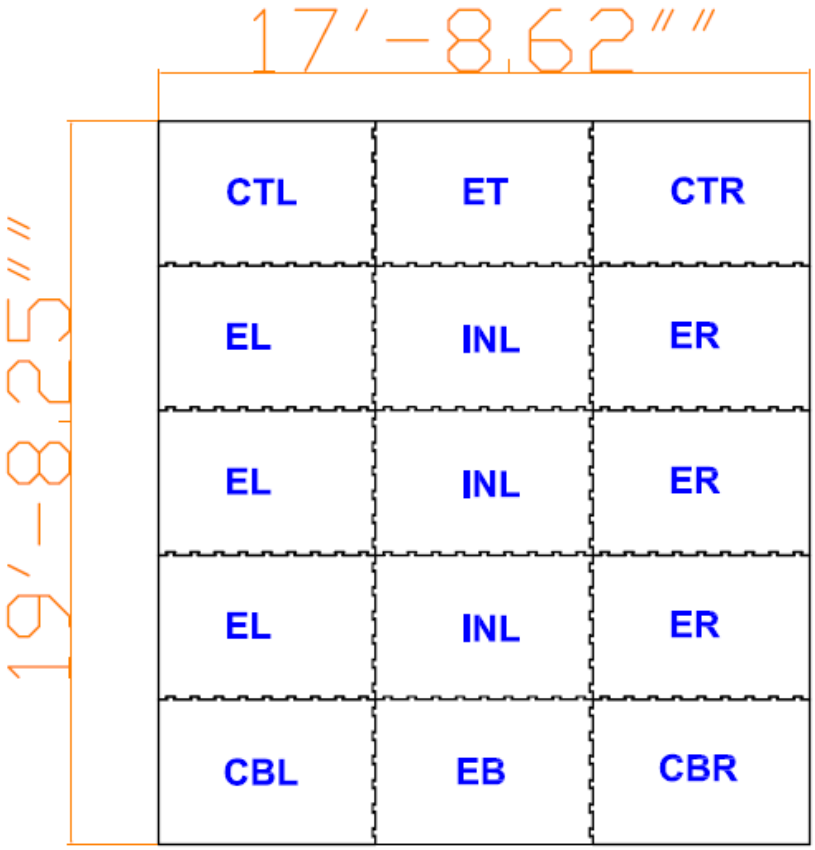

1. Choose a large, flat area that is free from dips, mounds, and debris.
2. Begin with one of the corners labeled CTL, CBL, CTR, or CBR. These are your corner pieces.
3. Follow the guide, pictured above, when placing each labeled mat. You will need a rubber mallet to assist the process of interlocking the mats with each other.
4. Once you complete the grid, you are ready to construct or move your Gaga Ball Pit onto the new floor.
5. Enjoy your 15' Gaga Ball Pit!

NOTE: If you are installing an In-Ground Gaga Ball Pit from 2by2, there will be long spikes that need to travel THROUGH this floor. You will need to use a box knife to cut an X into the floor at each spike location.

PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

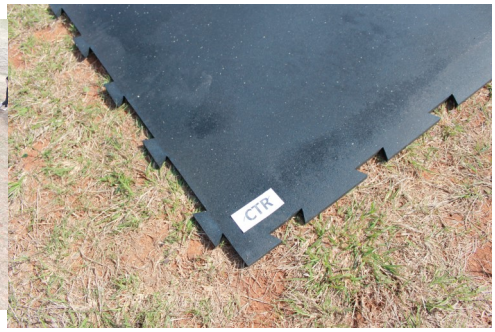

20' GAGA BALL PIT FLOOR

INSTALLATION INSTRUCTIONS

PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

WATCH INSTALL VIDEO!

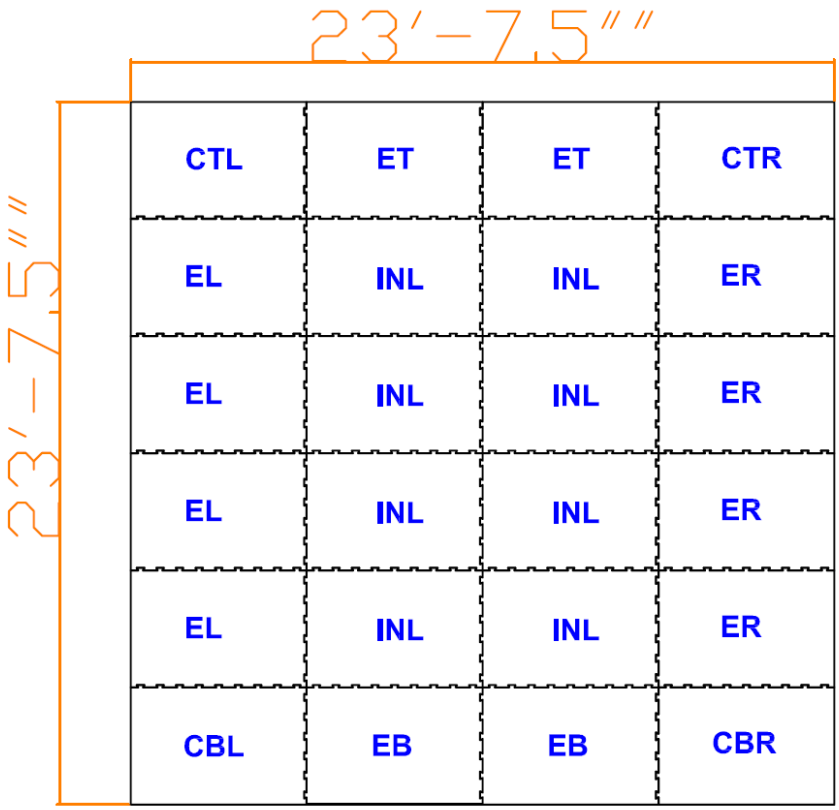

1. Choose a large, flat area that is free from dips, mounds, and debris.
2. Begin with one of the corners labeled CTL, CBL, CTR, or CBR. These are your corner pieces.
3. Follow the guide, pictured above, when placing each labeled mat. You will need a rubber mallet to assist the process of interlocking the mats with each other.
4. Once you complete the grid, you are ready to construct or move your Gaga Ball Pit onto the new floor.
5. Enjoy your 20' Gaga Ball Pit!

NOTE: If you are installing an In-Ground Gaga Ball Pit from 2by2, there will be long spikes that need to travel THROUGH this floor. You will need to use a box knife to cut an X into the floor at each spike location.

PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

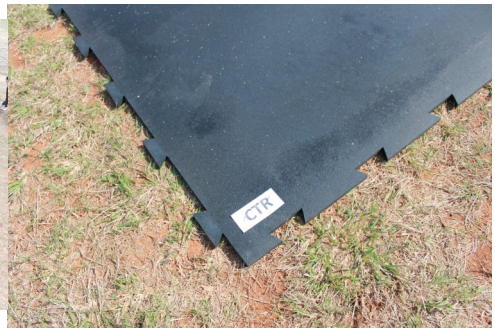

26' GAGA BALL PIT FLOOR

INSTALLATION INSTRUCTIONS

PO Box 7987
Edmond, OK 73083

14710-A Metro Plaza Blvd
Edmond, OK 73013

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

2 BY INDUSTRIES

WATCH INSTALL VIDEO!

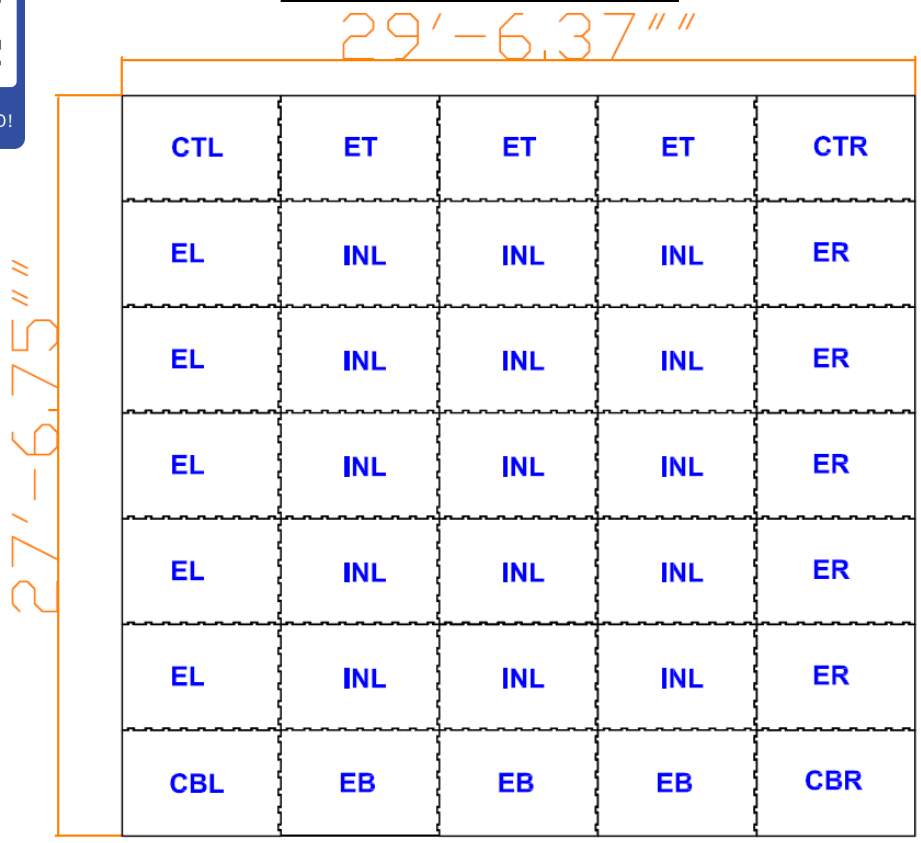

1. Choose a large, flat area that is free from dips, mounds, and debris.
2. Begin with one of the corners labeled CTL, CBL, CTR, or CBR. These are your corner pieces.
3. Follow the guide, pictured above, when placing each labeled mat. You will need a rubber mallet to assist the process of interlocking the mats with each other.
4. Once you complete the grid, you are ready to construct or move your Gaga Ball Pit onto the new floor.
5. Enjoy your 26' Gaga Ball Pit!

NOTE: If you are installing an In-Ground Gaga Ball Pit from 2by2, there will be long spikes that need to travel THROUGH this floor. You will need to use a box knife to cut an X into the floor at each spike location.

OR